# OVERHEAD SYSTEM INSTALLATION OVERVIEW

## DON'T

THE DV-1 IS VERY SENSITIVE TO GROUND NOISE. FAILURE TO CONNECT THE POWER AND GROUND DIRECTLY TO THE VEHICLE BATTERY WILL RESULT IN UNRELIABLE PERFORMANCE.

## DO!

TO ENSURE STABLE OPERATION, POWER AND GROUND MUST BE DIRECTLY CONNECTED TO THE VEHICLE BATTERY.

**⚠ WARNING**

BEFORE POWERING THE DV-1 SYSTEM, REMOVE THE SHIPPING INSERT *(PAPER OR FOAM)* FROM INSIDE THE DVD DRIVE

MAIN VEHICLE BATTERY

FUSE (7.5AMP)

FIREWALL

OPTIONAL INTELLIGENT UNINTERRUPTIBLE POWER SUPPLY (iUPS)

(OR)

BYPASS

BRACKET ASSEMBLY

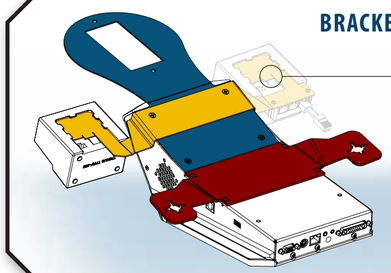

- Optional Dual Microphone Bracket
- Wireless Microphone Bracket
- Ticket Light Bracket
- Overhead Mounting Bracket

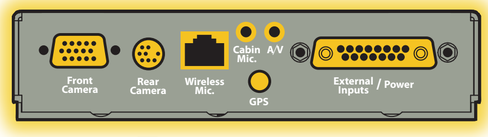


WATCHGUARD

IGNITION

FUSE (1AMP)

EMERGENCY LIGHTS

AUX INPUT

BRAKE

CHASSIS GROUND

OPTIONAL RADAR INTERFACE CABLE

RADAR

SIREN INPUT

POWER

EXTERNAL INPUT

COMBINATION CAMERA

OPTIONAL REAR OR AUXILLARY CAMERA

CAMERA POSITIONING

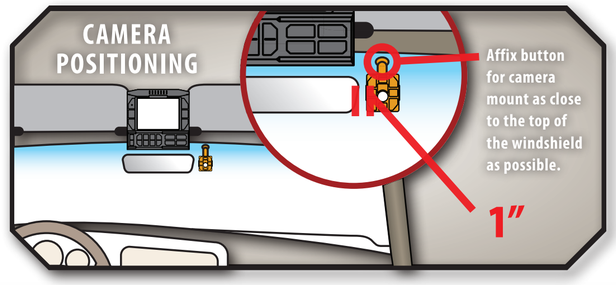


DIGITAL WIRELESS MICROPHONE

CABIN MICROPHONE

OPTIONAL GPS ANTENNA